

Technical product information No. 06.06	
Product/Version	CamDisc^{svr} 4, CamDisc^{svr}10, CamTel^{svr} 4, CamTel^{svr}10, CamMobile 4, CamMobile 10 CamControl LITE , version 3.53 or higher CamControl PRO , version 3.54 or higher CamControl SERVER , version 3.52 or higher
Date	September 2006
Topic	Separate RMCTRL subdirectory for R01 files for CamControl LITE/PRO/SERVER software version 3.52 or higher
Short description	With software version 3.52 or higher, the R01 files for controlling PTZ systems, dome cameras and/or relays of CamControl LITE/PRO/SERVER will be saved in a separate directory. This text contains information on how to upgrade from an older to a new software version.
Download latest Firmware Version	http://www.heitel.com/c.php/gb/Service/Software_Updates/svrfirmwareupdate/index.rsys
Download CamControl LITE Demo Version	http://www.heitel.com/c.php/gb/Applications/DemoSoftware/camcontrol_lite/index.rsys
Download CamControl PRO Demo Version	http://www.heitel.com/c.php/gb/Applications/DemoSoftware/camcontrol_pro/index.rsys

1. Introduction

If you are using **CamControl LITE/PRO/SERVER** version 3.51 or lower, these applications expect the **R01** control files in the relevant program directory. As part of further development, the new versions of these programs (version 3.54 or higher) manage the **R01** files in a subdirectory named \RMCTRL.

R01 files that are only saved in the program directory of **CamControl LITE/PRO/SERVER** will be ignored by the new software. This means that after you upgrade to a new version of **CamControl** software, you may not have access to PTZ control, listboxes and/or button fields.

2. CamControl Software update


Please note the instructions in the relevant manual when updating the software.

CamControl LITE/PRO/SERVER version 3.51 and lower expects the **R01** control files to be in the relevant program directory, but the latest version of the **CamControl** programs save these control files in the \RMCTRL subdirectory.

Please note the following points when updating **CamControl** software version 3.51 or lower to version 3.52 or higher:

1. Back up your **R01** files before updating.
2. After you have updated the software, check that the \RMCTRL subdirectory has been created in the program directory.
If this directory does not exist, then create it in the program directory.
3. Copy the backed-up **R01** files to the \RMCTRL directory.
4. Then check the functions of all the transmitters for which **R01** files were created.

Example **CamControl LITE**:

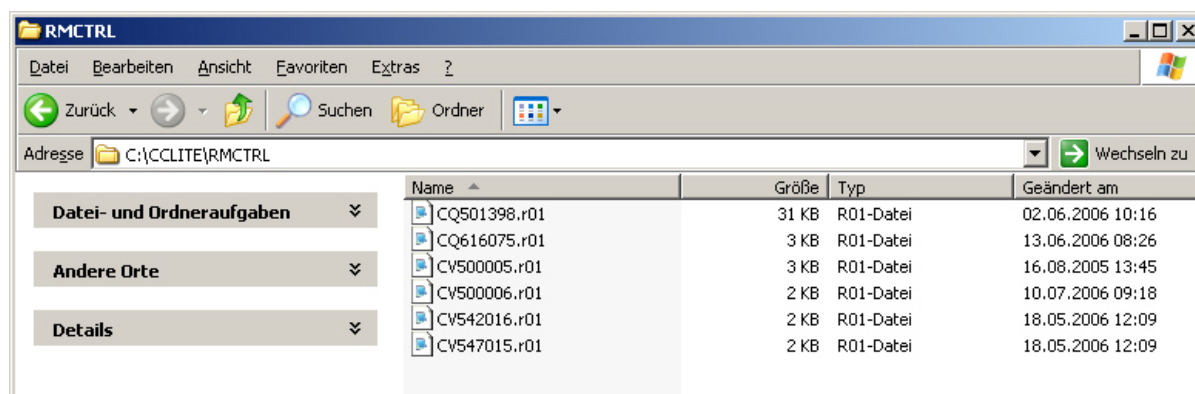

If a connection has already been established to a transmitter in **Settings/Recorder settings/PTZ control**, then the \RMCTRL subdirectory is automatically created once you select the **Update control file (.R01)** option and close the dialog box by clicking **OK**.